

Measurement Features CAM028L / CAM026L

Original Instruction Manual

Version B



Contents

Defect Clock Reference	06
Overview of the Concept	06
Example using non-laser equipped cameras	06
When user is not performing a WinCan or ProPIPE+ survey	06
When user is performing a WinCan or ProPIPE+ survey	07
Find a defect that requires a Clock Reference	08
When user is not performing a WinCan or ProPIPE+ survey	08
When user is performing a WinCan or ProPIPE+ survey	10
Choose the Clock Reference for the Defect	12
Completing the Clock Reference	13
When user is not performing a WinCan or ProPIPE+ survey	13
Laser Defect Measurement	14
Overview of the Concept	14
Find a Defect to Measure	14
When user is not performing a WinCan or ProPIPE+ survey	14
When user is performing a WinCan or ProPIPE+ survey	16
When user is performing a WinCan or ProPIPE+ survey Make the Defect and Lasers Visible On-screen	16 17
When user is performing a WinCan or ProPIPE+ survey Make the Defect and Lasers Visible On-screen Locate the Positions of the Defect and Laser On-screen	16 17 18
When user is performing a WinCan or ProPIPE+ survey Make the Defect and Lasers Visible On-screen Locate the Positions of the Defect and Laser On-screen Completing the Measurement	16 17 18 19
When user is performing a WinCan or ProPIPE+ survey Make the Defect and Lasers Visible On-screen Locate the Positions of the Defect and Laser On-screen Completing the Measurement When user is not performing a WinCan or ProPIPE+ survey	16 17 18 19 19
When user is performing a WinCan or ProPIPE+ survey Make the Defect and Lasers Visible On-screen Locate the Positions of the Defect and Laser On-screen Completing the Measurement When user is not performing a WinCan or ProPIPE+ survey When user is performing a WinCan or ProPIPE+ survey	16 17 18 19 19 20

Pipe Diameter Measurement	24
Overview of the Concept	24
Begin observation that requires a Diameter Measurement	24
When user is not performing a WinCan or ProPIPE+ survey	24
When user is performing a WinCan or ProPIPE+ survey	26
Perform the Diameter Measurement	28
Store the Measurement into your Observation	30
When user is not performing a WinCan or ProPIPE+ survey	30
When user is performing a WinCan or ProPIPE+ survey	31
Water Level Measurement	32
Overview of the Concept	32
Perform a Water Level Measurement	33
CAM026L Pan, Rotate & Laser Camera	35
Description and Parts	35
Technical Specifications	36
CAM028L Pan, Rotate, Laser & Zoom Camera	37
Description and Parts	37
Technical Specifications	38

Defect Clock Reference

Overview of the Concept

Observations using non-laser cameras require the user to enter a **Clock Reference** value, as a number from 1 through 12, representing the position of a defect in a pipe when the pipe is visualised on a clock face.

Using Minicam's CAM026L and CAM028L enables the user to access selectable or automated on-screen graphics instead, so that the CCU automatically selects the **Clock Reference** value.



Example using non-laser equipped cameras

When user is not performing a WinCan or ProPIPE+ survey

Using a non-laser camera the user directly types in the text for the **Clock Reference** value, using their judgement of the position of the defect.



When user is performing a WinCan or ProPIPE+ survey





At present user selects a parameter that requires a **Clock Reference**, then...



Presses the **Left Arrow** / **Right Arrow** keys to scroll through the values from 1 O'clock to 12 O'clock.

The value that the user selects is based on their judgement of the position of the defect.

							0
							A T
	ural 🛛 Cracks 🖉 Cra	ck 🛛 Longitudin	al		■ 1/1		
	ock 1 12 O'Clock	•	from;at				
-In Ro ct	oof Slab? 100se				C In root	@	0.00
Con	tinuous Defect	/disable				5	0.0
Rem	arks						
0.00m	Camera		free lext	Store (with photo)	Moceuro		
Ch.		s 🔔 Select		o photo) ESC	Cancel		

1 Find a defect that requires a Clock Reference

Using Minicam's CAM026L and CAM028L enables the user to access selectable or automated on-screen graphics, so that the CCU automatically selects the **Clock Reference** value.

Using Laser Equipped Cameras

When user is not performing a WinCan or ProPIPE+ survey

Locate a pipe wall defect that requires a **Clock Reference**. If you desire, you can first type in some survey text to describe the defect For example,type in **Crack at:** Later on, after you've found the Clock Reference, the reference value text will automatically be inserted after your text on-screen, to make for example. **Crack at: 9 O'Clock**





Press the **Camera Settings** key to display the Camera menu.

Continued on next page

Continued from previous page



When user is performing a WinCan or ProPIPE+ survey





In the normal way, choose an observation **Defect Code** that requires a **Clock Reference**. The usual observation parameters entry box appears:





Press the **Up Arrow** / **Down Arrow** keys to select an observation parameter that requires a **Clock Reference** value.

Press the **F6** key.

The observation parameters entry box is removed from screen.

The camera picture view with **Clock Reference Facilities** is displayed. Now follow STEP 2 on page 12 *Choose the Clock Reference for the Defect*.





2 Choose the Clock Reference for the Defect

The 'Clock Reference Facilities' allow you to choose the clock reference nearest to the defect.



If you have a Pan and Rotate Camera:

• The **Clock Reference** selected automatically 'follows' the direction in which the camera is pointing. As you rotate or tilt the camera, the selected **Clock Reference** automatically changes to what you are looking at.

• You can still manually select the **Clock Reference** if you want to.

• The currently chosen Clock Reference is highlighted in green (see example above).

Press number keys **1** through to **9** to jump directly to choose that number of the **Clock Reference**. For double figures (10, 11 and 12) use the **Rewind/Fast Forward** keys as described below.



Press the **Rewind** key to move your choice **Anti-Clockwise**.



Press the **Fast Forward** key to move your choice **Clockwise**. Now follow STEP 3 on page 13 *Completing the Clock Reference.*

3 Completing the Clock Reference



Laser Defect Measurement

Overview of the Concept

Proteus[™] Control Units (CCU) and crawlers, along with laser equipped Minicam cameras, allow you to measure the length of a defect, such as a crack or a joint displacement, and to automatically insert that measurement into your observations.

The defect measurements can be made within a *WinCan* or *ProPIPE*+ survey, or outside of these surveys just using free-format survey text entry.

The basic principle is:

- Find a defect to measure
- · Begin an observation of that defect
- · Manually make the defect and lasers visible on-screen
- Manually locate the positions of the lasers and the defect on-screen
- Store the measurement into your observation

1 Find a Defect to Measure



Continued on next page



When user is performing a WinCan or ProPIPE+ survey



Locate a pipe wall defect that requires Measurement.

Drive the crawler up to the defect.

To begin an observation of that defect:

In the normal way, choose an observation **Defect Code** that requires the **Measurement**. The usual observation parameters entry box appears.





F6

Press the **Up Arrow** / **Down Arrow** keys to select the observation parameter that requires a **Measurement** value.

Press the **F6** key to display the **Measure** options.

• The observation parameters entry box is removed from screen.

• The camera picture view with **Measurement Facilities** becomes visible. Follow STEP 2 on page 17.

• The camera tilt is automatically angled to directly face the pipe wall.

Make the Defect and Lasers Visible On-screen 2





Use the **Rewind** and **Fast Forward** keys to adjust the brightness of the lasers and the camera lights if required.

3 Locate the Positions of the Defect and Laser On-screen



Completing the Measurement



When user is performing a WinCan or ProPIPE+ survey







• The CCU remembers the defect length, measured between the measurement centres.

Then the observation parameter entry box reappears • The defect length is automatically inserted into the selected parameter that required the measurement.

• The value can then be manually edited if desired.



Measurement Facilities Screen Keys

For making the Defect and Lasers visible on-screen

ACTIONS

KEYS

Q

+

Adjust camera zoom, such that the lasers are as far apart as possible, and the defect is still fully visible

For Locating the Defect Measurement Start and End Positions

KEYS	ACTIONS			
To select the measurement	Restores the saved camera illumination level (if lasers were previously being adjusted). First Measurement Point is initially selected for positioning.			
point to move:	••	Adjust camera illumination brightness		
Select first measurement point	Home	Jump measurement point 50 pixels to the left		
	End	Jump measurement point 50 pixels to the right		
Select second measurement point	Prev	Jump 50 pixels up		
	Next	Jump 50 pixels down		
		Fine adjust measurement point cen- tre position		

For Locating the Laser Centre Positions

KEYS	ACTIONS			
To select the	Saves then Dims the camera illumination level. Switches ON lasers			
to move:	◀ ▶	Adjust laser brightness		
^{F3} Select CAM028L Top Laser, OR CAM026L Left Laser	Home	Jump measurement point 50 pixels to the left (ONLY for Top/Left Laser)		
	Home	Jump measurement point 50 pixels to the right (ONLY for Top/Left Laser)		
F4 Select CAM028L Bottom Laser, OR CAM026L Right Laser	Home	Jump 50 pixels up		
	Home	Jump 50 pixels down		
		Fine adjust laser centre position		

For Closing the Measurement Facilities Screen

KEYS	ACTIONS
OK	Save the positions of the laser and measurement centres (to be recalled on next measurement ob- servation). Save the defect length measurement value. Switches OFF lasers. Close the Measurement Facilities Screen. Restore camera illumination to previous brightness. <i>If</i> NOT <i>doing a Wincan or ProPIPE+ survey:</i> • Automatically write the defect length measure- ment into the on-screen survey text If you ARE doing a Wincan or ProPIPE+ survey: • Reshow the observation parameter entry box. • Automatically paste the defect measurement val- ue into the selected parameter's value.
Esc	 Switches OFF lasers. Close the Measurement Facilities Screen. Restore camera illumination to previous brightness <i>If you</i> ARE <i>doing a Wincan or ProPIPE</i>+ <i>survey:</i> Reshow the observation parameter entry box.

Pipe Diameter Measurement

Overview of the Concept

SOLOPro+ Push-rod systems, and Proteus[™] Crawler systems which are equipped with Minicam **Diameter Sensor** cameras CAM026L/ CAM028L, allow the user to measure the diameter of a round pipe, and to automatically insert that measurement into your observations. The diameter measurements can be made within a *WinCan* or *ProPIPE*+ survey, or outside of these surveys just using free-format survey text entry.

The basic principle is:

- Begin an observation of a defect that requires a diameter measurement.
- Perform the diameter measurement.
- Store the measurement into your observation.

1 Begin observation that requires a Diameter Measurement

When user is not performing a WinCan or ProPIPE+ survey Locate a point in the pipe that requires diameter measurement. To begin an observation of that defect: If you desire, you can first type in some survey text to describe the measurement. For example, type in Diameter. Later on, after you've done the diameter measurement, the pipe diameter value will automatically be inserted after this text on-screen, to make for example: Diameter: 150mm.

Continued on next page



Continued on next page



Free lox Store (with Mae

🛚 choose 🛛 Symbols 🕂 Select 🛛 K Store (no photo) 📧 Cance

Continued on next page

Continued from previous page



2 Perform the Diameter Measurement

• Decide which type of Diameter Measurement you wish to perform.

• Press the appropriate coloured **Function** key for your choice of **Diameter Measurement** type.



Continued on next page

	Press the appropriate coloured Function key to begin the Measure using your chosen type of measurement.
	 The screen shows the measurement in progress. When the measurement is complete, the measured value is shown.
Esc	• Press the Esc key if you want to stop and cancel the measurement, or if you don't want to store and use the measured value.
ОК	• To store and use the measured value, press OK .
	 Press one of the coloured keys to measure using that type of measurement (STEP 2 on page 28 <i>Perform the Diameter Measurement</i>). The observation parameters entry box is removed from screen so you can see the camera picture.
	Diameter Measure 150mm K Store Est Close

3 Store the Measurement into your Observation

When user is not performing a WinCan or ProPIPE+ survey



When the measurement has been performed, press the **OK** key if you want to store and use the measured value automatically.

• The measured value is automatically inserted into your text

on-screen, to say for example. **Diameter: 150mm**



When user is performing a WinCan or ProPIPE+ survey







When the measurement has been performed, press the **OK** key if you want to store and use the measured value automatically.

• The measured value is automatically inserted into the highlighted observation parameter.

• You can change this automatically inserted value if you want.



Water Level Measurement

(Based on user-adjustable OSD graphics)

Overview of the Concept

Many observations require the user to enter a **Water Level** value, usually as a percentage of the total pipe diameter. (Norway for example has many cases where Water Level is important).

Here is described a method for measuring the Water Level.



Continued on next page

Perform a Water Level Measurement

Locate a point in the pipe that requires water level measurement.

To begin an water level measurement: If you desire, you can first type in some survey text to describe the measurement.

• For example, type in Water Level.

• Later on, after you've done the diameter measurement, the pipe diameter value will automatically be inserted after this text on-screen, to make for example: **Water Level: 8%**



Use the **Left Arrow** / **Right Arrow** keys to adjust the position of the **YELLOW** line to touch the pipe joint.



Use the **Up Arrow** / **Down Arrow** keys to adjust the position of the **BLUE** to sit on the water. Use the **Left Arrow** / **Right Arrow** keys to adjust each end of the **BLUE** line to touch both sides of pipe.



Continued on next page

Continued from previous page



The Water Level is shown on-screen.



Press **OK** to either paste the water level value into a *Wincan* or *ProPIPE*+ observation parameter, or to write it to the screen survey text.

CAM026L Pan, Rotate & Laser Camera

Description and Parts

The camera module CAM026L provides a high resolution colour, pan, rotate and laser camera for the Proteus[™] platform. It has the following features:

- High resolution colour CCD image sensor
- · Powerful LED lighting with narrow beam width lenses
- Dual Lasers
- Endless rotation range
- Panning range of +/- 135°
- Motorised focus control
- · Internal pressure monitoring
- Impact resistant with user replaceable rubber protectors



- A Serial number location
- **B** LED illumination
- C Laser
- D Camera lens
- E Rubber protector
- F LED illumination
- **G** Laser

- H Rubber protector
- J Distance sensor
- K Purge point
- L Camera protection skid
- M Camera connector
- N Camera protection skid screws
- (6)

Technical Specifications

CAM026L - Pan, Rotate & Laser Camera		
Product Code	CAM026L	
Pipe Diameter Measurement Range	90-600mm	
Aligned Laser Spacing	25mm	
Camera Resolution	470 HTVL	
Sensitivity	<1.0 lux	
Aperture/Field of View	F2.5 / 75°	
Dimensions	120 x 74 x 74mm	
Maximum Illumination Intensity	12.5k lux at 150mm	
Pressure Depth Rating	1 bar (14.50psi)	

CAM028L Pan, Rotate, Laser & Zoom Camera

Description and Parts

The camera module CAM028L provides a high resolution colour, pan, rotate, zoom and laser camera for the Proteus[™] platform. It has the following features:

- High resolution colour CCD image sensor
- Powerful LED lighting with narrow beam width lenses
- Dual Lasers
- Endless rotation range
- Panning range of +/- 135°
- 10x optical 12x digital zoom
- Motorised focus control
- Internal pressure monitoring



- A Serial number location
- **B** LED illumination
- C Laser
- D Camera lens
- E Laser
- F LED illumination

- **G** Front housing
- H Distance sensor
- J Purge point
- K Camera protection skid
- L Camera connector

Technical Specifications

CAM028L - Pan, Rotate, Zoom & Laser Camera		
Product Code	CAM028L	
Pipe Diameter Measurement Range	90-600mm	
Aligned Laser Spacing	30mm	
Camera Resolution	530 HTVL	
Sensitivity	<1.0 lux	
Aperture/Field of View	F1.8-F2.9 / 46° - 4.6°	
Dimensions	143 x 80 x 80mm	
Maximum Illumination Intensity	12.5k lux at 150mm	
Pressure Depth Rating	1 bar (14.50psi)	



Minicam Ltd Unit 4, Yew Tree Way, Stonecross Park, Golborne, Warrington, WA3 3JD United Kingdom

Tel: +44 (0)1942 270524 Email: info@minicam.co.uk www.minicamgroup.com





A **Halma** company

©2022 Minicam. All rights reserved. Specifications subject to change without notice Minicam is a Halma Company.